



Installation Instruction MV Handlebar Alteration BMW K1100 RS


At first remove all cable clips around the handlebar and frame in the front area in order to obtain enough space for the string lengths of the cables. Then dismantle the tank and thereafter the baffle plate. The baffle plate has to be dismantled completely enabling an easier sawing – a pattern for sawing is attached.

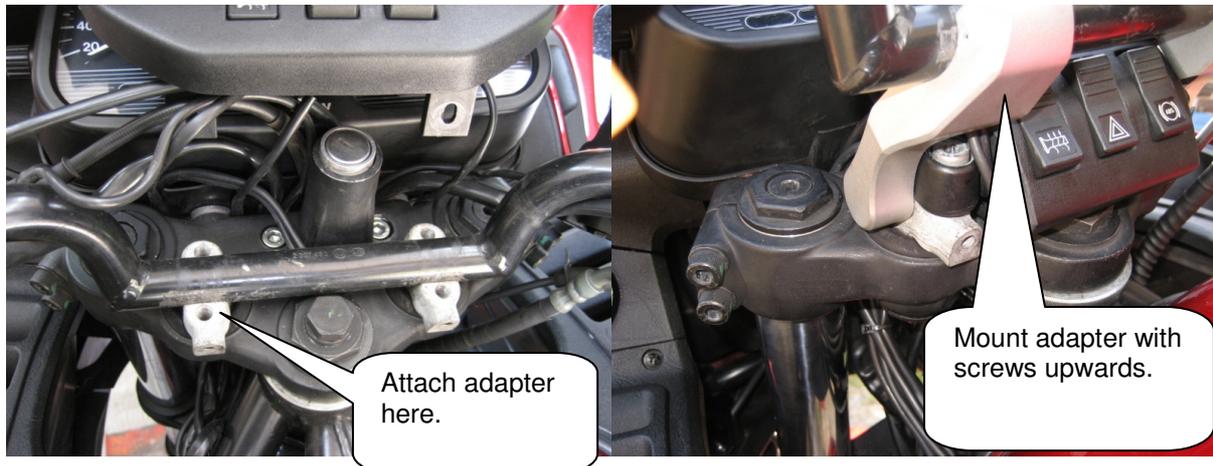

Hang out the clutch and throttle cable and put it aside so that both can be repositioned later. Fit the brake hose extension – as shown in the picture. Now the handlebar can be dismantled in order to fit both enclosed handlebar adapters.

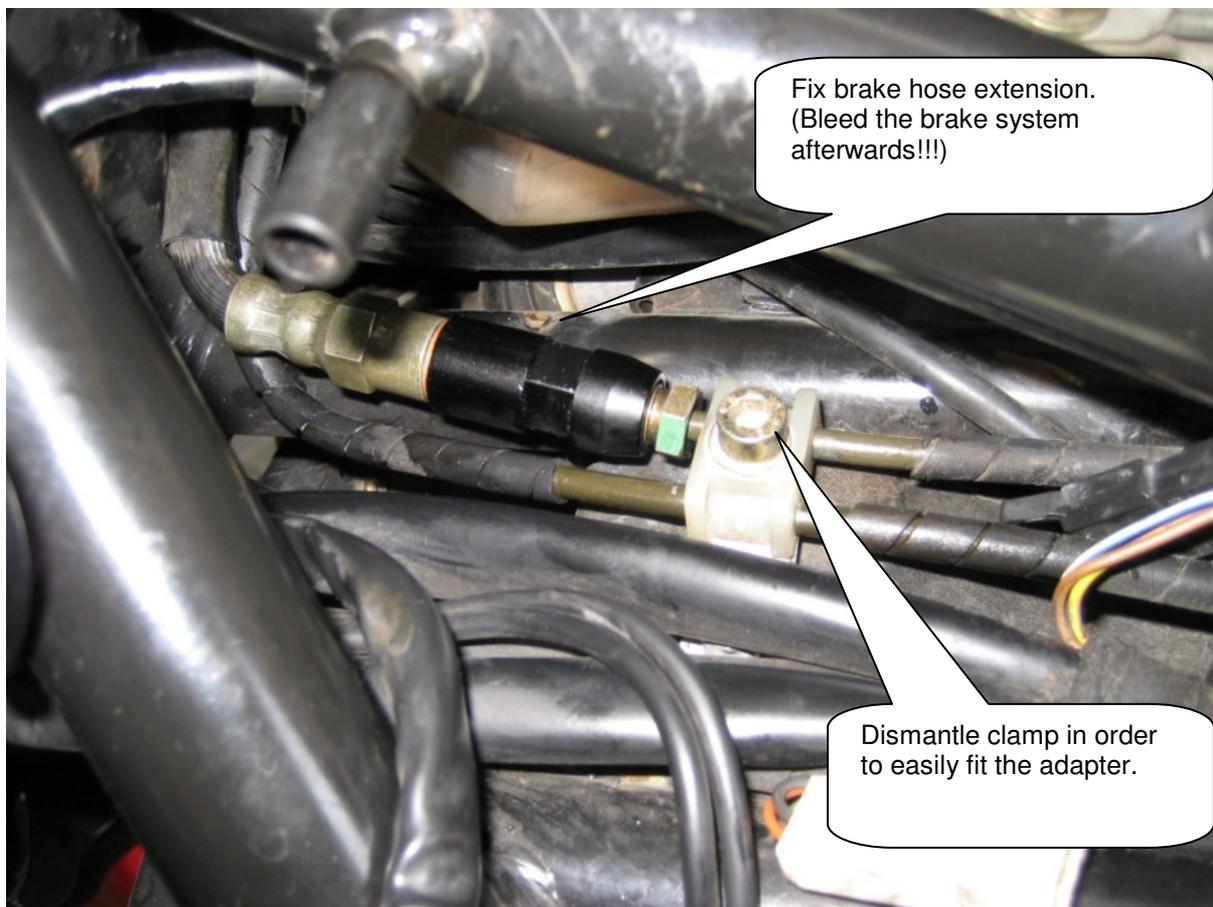

Attach the MV handlebar extensions, screw on the handlebar and adjust it. Heat the baffle plate by using a hot air gun and slightly bend/adjust it (refer to pattern).

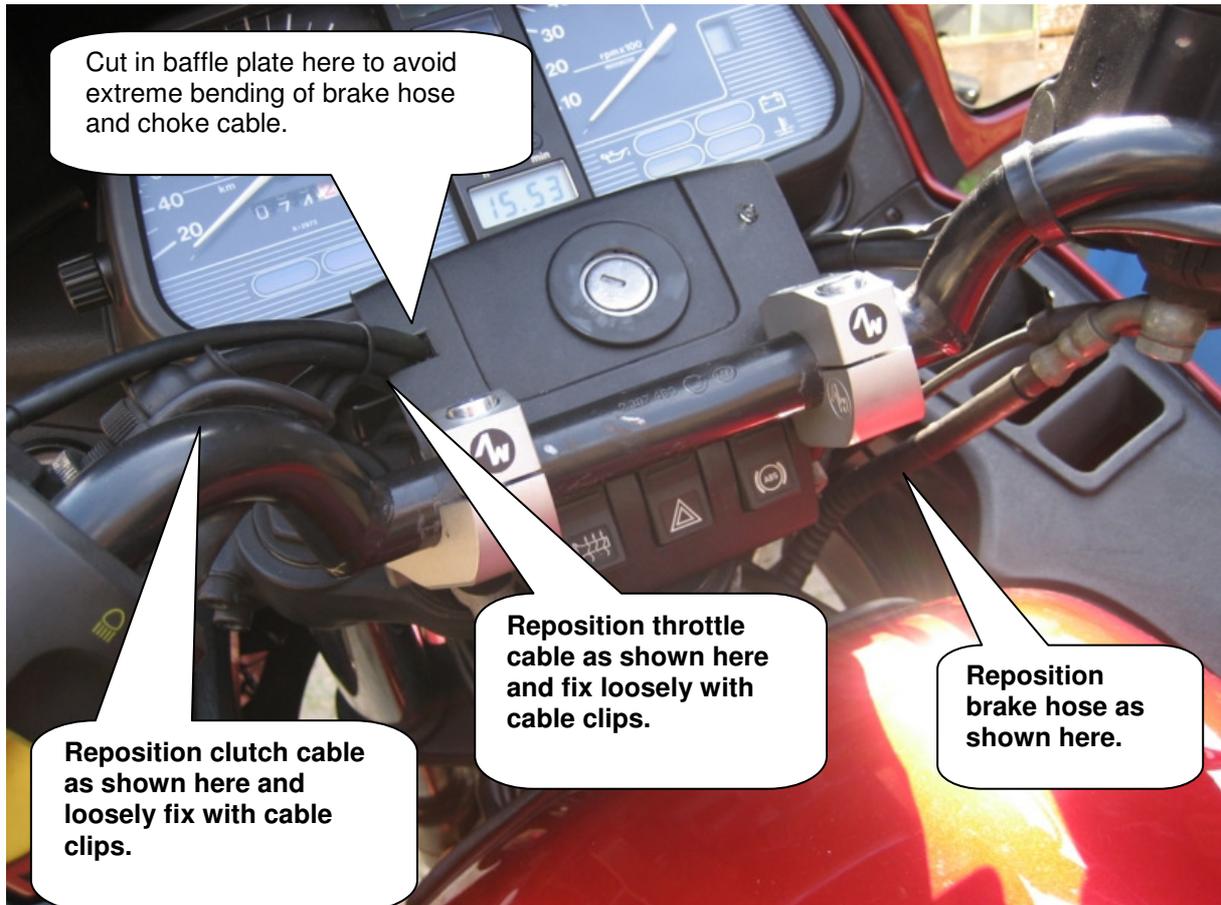

Finally fix all cables with cable clips and make sure that all cable and lines have enough play to avoid rubbing when the handlebar is completely turned.

Attention:

DO not drive without having exhausted the air from the brake system even if it seems that the brake system is o.k. without having exhausted the air.

We highly recommend that you have the installation made by an authorized service center.

Your MV-Motorrad-Team

**MV Motorrad - Technik GmbH
Monika Verholen
Energistr. 3
41751 Viersen
Germany**

**Phone: 0049 (0) 2162 · 32 5 64
Telefax: 0049 (0) 2162 · 34 5 82
E-Mail: mail@verholen.de**